

### Analogue Dock User Guide


## Play Pocket, on the big screen.


Analogue Dock is an amazing companion for Pocket. With Dock you can connect Pocket to your HDTV. Sync up any wireless 8BitDo Bluetooth or 2.4g controller directly to Dock for wireless play. Up to 4 player support. You can connect controllers directly via wired USB, too.

Some features coming in OS v1.1

#### What's in the box

- Analogue Dock
- Fast charging USB-C Power Supply
- HDMI cable
- USB-C cable

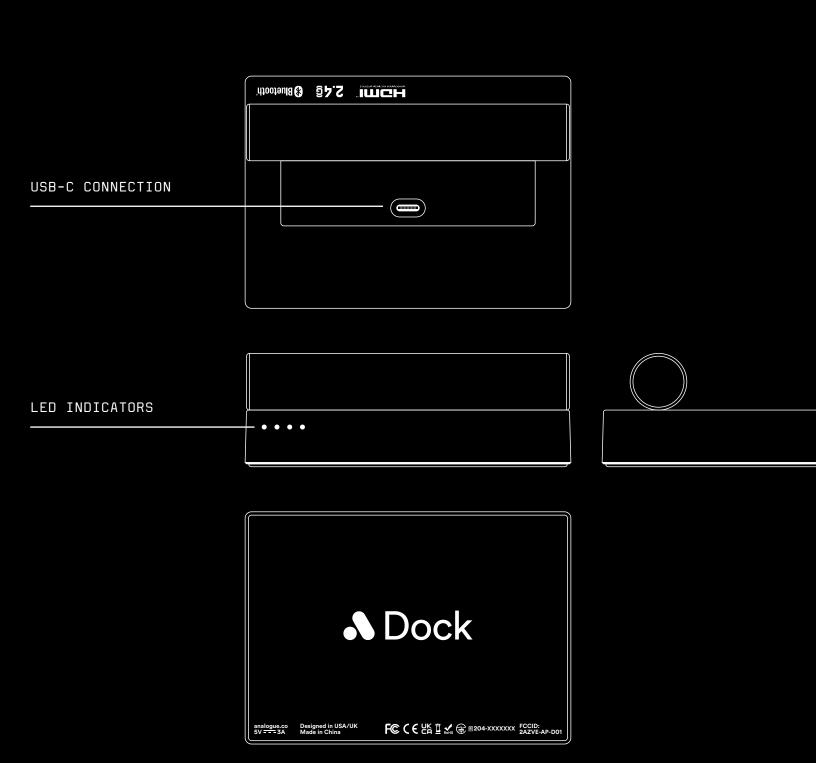

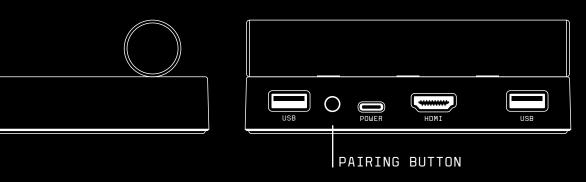

#### Adding your Dock to your Setup

Analogue Dock is designed to allow you to play your favorite handheld games with Analogue Pocket on an external display or television with your USB, Bluetooth or 8BitDo 2.4G controllers.

When Pocket is Docked, you can output video and audio via Dock's HDMI port.

To use Dock, connect the power supply to the USB-C cable and the cable to Dock, plug in the power supply and insert Analogue Pocket into the vertical USB-C port on Dock.

Dock has two USB ports which may be used for many USB controllers. Dock may receive input from up to two Bluetooth controllers. Additionally, Dock may receive input from up to two 8BitDo 2.4G controllers.

Dock will permit Analogue Pocket to be charged when connected to a power supply.

When you first wish to use Dock, Pocket should be turned on. After you pair a controller, you can activate that controller (typically with the Start button) to turn on Dock without having to press the power button on Pocket.

#### **Upgrading Dock's Firmware**

In order to Upgrade Dock's Firmware, first you must update Pocket's firmware to 1.0b or greater. Then plug Dock into its power source, turn on Pocket and place Pocket into Dock's cradle. Pocket now incorporates Dock's firmware and will automatically update Dock's firmware to the version included with Pocket's firmware. You will see an update bar on Pocket's screen and any display connected to Dock. If power is lost while firmware is updating, restart the firmware updating process again after power is restored.

#### **LED Status**

1	LED Blinking White	Pairing
2	LED Solid White	Controller Paired
3	LED Solid Green	<b>Dock Powered</b>
4	LED Throbbing Green	Pocket Charging

#### **Ports and Indicators**

**HDMI** Port

Output video and audio from Analogue Pocket to your display or receiver.

USB Ports x 2
Plug in your USB controllers here

Power Port

Insert the USB-C Cable and connect it to the Fast charging USB-C Power Supply to power Dock.

Pairing Button
Used primarily for manual pairing

Indicator LEDs
Indicate whether Player 1 - 4 is paired with Dock

#### **Pairing your Wireless Controllers**

- 1 Dock will enter auto-pairing mode for P1, indicated on dock with blinking LED.
- 2 Follow the instructions for your controller to enter its pairing mode\*.
- 3 Player indicator will become solid when a controller is paired, or wired controller connected to USB port.
- 4 Enter Controllers menu to pair more, or change controller order.
- To manually pair a controller to Dock, press the pair button on the back of Dock until the indicator LEDs blink to enter pairing mode.

\*8bitdo Bluetooth Controllers should be put in X-input pairing modes

#### Wired Controllers

Plug any hardwired USB controller that Dock supports into a USB port and it will instantly connect to Dock. You can also use any supported wireless controller as a wired USB controller by adapting it with a USB cable.

#### **Controllers - Dock 1.0 Firmware Supported Controllers**

- Switch Pro (and variants)
- Switch Joycon
- Wiiu Pro
- Wiimote

- Xbox One
- PS4
- PS5
- 8bitdo Pro 2
- 8bitdo Zero 2
- 8bitdo Lite
- 8bitdo M30
- 8bitdo SN30 Pro
- 8bitdo SN30 Pro+
- 8bitdo N30
- 8bitdo SN30
- 8bitdo N30 Pro 2
- 8bitdo Arcade Stick (Bluetooth only)
- 2.4g N30/SN30
- 2.4g M30
- 2.4g PCE

#### Pairing controllers to Dock

- Press the pairing button on the back of Dock.
   P1 LED indicator will start to blink. Dock is now in Pairing mode.
- 2. Put your controller in pairing mode by pressing the pairing button.
- 3. Your controller will pair to Dock.
- \*Pairing your PS4 controller: press and hold the PS button and Share button to enter pairing mode.
- + If you experience any connectivity issues, please update your controller to the latest firmware at support.8bitdo.com
- + All 8BitDo controllers must be in X INPUT mode. Refer to your 8bitdo controller's manual for instructions on how to do this.

		GB/GBC						Game Gear						
	Menu	Α	В	L	R	ST	SE	Α	В	ST	SE	1	2	ST
8BitDo Controllers														
Pro 2 [Bluetooth]	Heart	Α	В	L	R	ST	SE	Α	В	ST	SE	Α	В	ST
M30 [Bluetooth]	Heart	В	Α	L	R	ST	-	В	Α	ST	-	Α	В	ST
Arcade Stick [Bluetooth, USB, 2.4]	Heart	А	В	L	R	ST	SE	Α	В	ST	SE	В	Α	ST
		GBA			GB/GBC					Game Gear				
	Menu	Α	В	L	R	ST	SE	Α	В	ST	SE	1	2	ST
Non 8BitDo Controllers														
PS4	PS	0	Χ	L&L2	R&R2	Opt.	Share	0	Х	Opt.	Share	Х	0	Opt.
Switch Pro	Home	Α	В	L&L2	R&R2	+	-	Α	В	+	-	Α	Χ	+

#### **Controllers - Coming in OS v1.1 / Dock Firmware 1.1**

Main system(s) default button mapping across compatible game controllers. <u>All Bluetooth 8BitDo controllers</u> need to be in X-Input mode before pairing.

		GBA						GB/G	ВС			Game Gea		
	Menu	Α	В	L	R	ST	SE	А	В	ST	SE	1	2	ST
8BitDo Controllers														
Wireless 2.4g														
Wil Cless 2rg														
Arcade Stick	Heart	А	В	L	R	ST	SE	Α	В	ST	SE	В	Α	ST
PCE	Heart	1	П			RN	SE	1	П	RN	SE	Ш	T	SE
M30 [Genesis Reciever]	Heart	В	А	L	R	ST	-	В	Α	ST	-	А	В	ST
M30 [Mini Reciever]	Heart	В	Α	L	R	ST	-	В	Α	ST	-	Α	В	ST
N30	Home	Α	В			ST	SE	Α	В	ST	SE	В	Α	ST
N30 [Noir Edition]	Home	Α	В			ST	SE	Α	В	ST	SE	В	Α	ST
SN/SF30 [Classic Reciever]	↓+ SE	Α	В	L	R	ST	SE	Α	В	ST	SE	В	Α	ST
SN/SF30 [Mini Reciever]	↓+SE	А	В	L	R	ST	SE	А	В	ST	SE	В	А	ST
Wireless Bluetooth														
Arcade Stick	Heart	A	В	L	R	ST	SE	Α	В	ST	SE	В	Α	ST
Lite	Heart	Α	В	L	R	+	-	Α	В	+	-	В	Α	+
M30	Heart	В	Α	L	R	ST	-	В	Α	ST	-	Α	В	ST
N30	Home	Α	В	L	R	ST	SE	Α	В	ST	SE	В	Α	ST
Pro 2	Heart	Α	В	L	R	ST_	SE	Α	В	ST	SE	Α	В	ST
SN30 Pro	Heart	Coming	g in C	<b>95 v1.1</b>	/ Doc	ck Fir	mwai	re 1.1	В	ST	SE	Α	В	ST
SN30 Pro+	Heart	Α	В	L	R	ST	SE	Α	В	ST	SE	Α	В	ST
SN30	↓+ SE	A	В	L	R	ST	SE	A	В	ST	SE	В	Α	ST
		GBA	GBA					GB/GBC			Game Gear			
	Menu	А	В	L	R	ST	SE	Α	В	ST	SE	1	2	ST
Non 8BitDo Controllers														
Wireless														
PS4	PS		Х	L&L2	R&R2	Opt.	Share		Х	Opt.	Share	Y		Opt.
Switch Pro	Home	A	^ 	L&L2	R&R2	+	- Onlare	A	^ 	+ Opt.	- Onare		X	+ +
Xbox One	Xbox	A B	A	L	R	Menu	View	B	A	Menu	View	A	^ 	Menu
Abox One	ADOX					ivieriu	VICVV			Wichiu	VICVV			TVICITO



# Analogue. Docked.